

CONNECTING



- 1) Coaxial output (to a converter D/A).
- 2) Optical output (to a converter D/A).
- 3) AES/EBU output (only for DR200).
- 4) Power Input.
- 5) Power switch ON/OFF.

DETAIL OF FUNCTIONS



- 6) Disc tray.
- 7) Previous track.
- 8) Next track.
- 9) Open/close.
- 10) Pause & Play.
- 11) Stop: stop functions Play & Repeat.
- 12) Stand-by: stand-by cancels all functions.

REMOTE CONTROL

Keys 7 to 12 have the same functions as on the front panel.

13) TIME: Displays the running time of each track. With one press, display the remaining time of the track.

14) Inactive.

15) Rear fast search key.

16) Forward fast search key.

17) A-B repeat: allows to select a specific reading zone from point A to point B. While playing, press this key to start the beginning of zone **A**, press a second time to select the end **B**. Selected zone will be played until you press again the AB key.

18) Repeat Mode (This function is also available while reading the disc)

Press on REP to choose the repeat mode:

- **R1**: makes a repetition of the same track. Confirm by pressing the ENTER key. The display shows **R1** between the number and the time of the track.
  - **R**: makes a repetition of the complete disc. Confirm by pressing the ENTER key. The display shows **R** between the number and the time of the track.
- STOP key (and keys 7) previous track & 8) next track on **R1** mode) cancels also all REPEAT modes.

19) PROGRAM (PROG): Press on PROG. The display shows on the Left the number of selected tracks (Nb 0) and on the Right the choice of tracks (Tr 1). Choose the first track of the program with the selection keys 7 & 8. Confirm by pressing on PROG. Select all tracks needed for the program, using the same procedure. The display shows the number of tracks (on the Left), **P** symbol. The total time of the program is seen by a press on TIME. Press PLAY to start playing the program. Press 2 times to cancel the program.

20) SHUFFLE: Press on SHUF. The display shows **S** between the number and the time of the track. The disc goes on the play. All tracks will be played once in random mode. Press STOP to cancel the random play. SHUFFLE and PROG menus are not available while reading the disc.

**Combination:** it is possible to combine a program with the REPEAT function (display shows **RP**) and SHUFFLE functions (display shows **RS**).

21) DISP.: allows to switch Off the display.



**Text:** Some disc have a "CD Text" section (giving name of artist, name of tracks...). Those texts are automatically read at the beginning of each track.

### COMPATIBILITY

This player can play CD and CD-R discs.  
Type of formats played: MP3-WMA-AAC

### E.C. MARKING

E.C. marking certified the conformity with low tension directive 73/23/CEE, directive CEM 89/336/CEE and national transpositions.

### GUARANTEE

The guarantee is **two years** long from date of purchase. We recommend you to ask your dealer to fill the guarantee and to conserve it. The guarantee is only available for appliance which have been use correctly.

### CLEANING

Before any cleaning, switch off your CD player. Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing abrasive agent. **Never try to clean up inside the appliance.**



### TECHNICAL DATA

|                       | DR100 Sig                          | DR200 Sig                          |
|-----------------------|------------------------------------|------------------------------------|
| Power supply:         | 30 VA                              | 30 VA                              |
| Total of capacitors:  | 14 141 $\mu$ F                     | 22 100 $\mu$ F                     |
| Digital output level: | 1V                                 | 1V                                 |
| Outputs:              | Coaxial-optical                    | Coaxial-optical-AES/EBU            |
| Consumption:          | Stand-by: 8,2 W<br>Reading: 11,5 W | Stand-by: 8,2 W<br>Reading: 11,5 W |
| Dimensions (mm):      | 440×280×90                         | 440×280×90                         |
| Weight:               | 6,0 kg                             | 6,5 kg                             |

Technical data are subject to modifications



### CAUTIONS

- **Do not make any connections when your device is powered on.**
- Put your CD player in a dry and well ventilated place, far from source of heat.
- Do not put something on your CD player.
- Do not make any plug in when the CD player is on.
- Avoid any short-cut.
- Respect polarity  $\oplus$  &  $\ominus$  and switch left & right.
- Do not put your CD player too close from a Tuner because of disagreement in HF reception.



### ADVISES

- To optimize the performance of your device, you should switch it on at least half an hour before any listening, the time for the power stage to reach its ideal working temperature.
- Your device will give you optimal listening quality after this time-lapse.
- Between two uses, it is, therefore, preferable to let the device in the standby position so that it remains at its optimum temperature.
- At night or when you leave your home, it is best to use the main switch to turn off the device.
- To optimize the sound quality of your system, we recommend that you choose good-quality connection cords. Do not hesitate to ask your specialist dealer for advice.

*You have just bought a CD player. with exceptional audiophile performance. We really thank you for your confidence in our products. To get the best part of your CD player, please read carefully this manual.*



YOU WILL FIND  
ENCLOSED

- A CD player.
- A remote control (with 2 batteries Lithium CR2025).
- A powerlead.
- This manual with the certificate of guarantee.

ATOLL ELECTRONIQUE®  
is a French Company that designs, manufactures, and  
commercializes all its products.





GUARANTEE ~ CD DRIVE MODEL

To present to your dealer with the invoice when returning back the appliance:

ATOLL ELECTRONIQUE®  
Bd des Merisiers  
50370 BRECEY  
FRANCE

Date of purchase:

Place of purchase:

Buyer signature:

Dealer Stamp

# OWNER'S MANUAL

CD DRIVE

## DR100 SIGNATURE DR200 SIGNATURE

